

# Audi Q7

## Current Flow Diagram

**No. 43 / 1**

Edition 02.2006

### Automatic gearbox 0AT

from model year 2007

**Notes:**

For information concerning

- ◆ Position of relays and fuses
- ◆ Multi-pin connections
- ◆ Control units and relays
- ◆ Earth connections

→ [List of Fitting Locations!](#)

For information concerning


- ◆ Fault Finding Programs

→ [guided fault finding](#)

# Audi Q7

## Current Flow Diagram

### No. 43 / 2

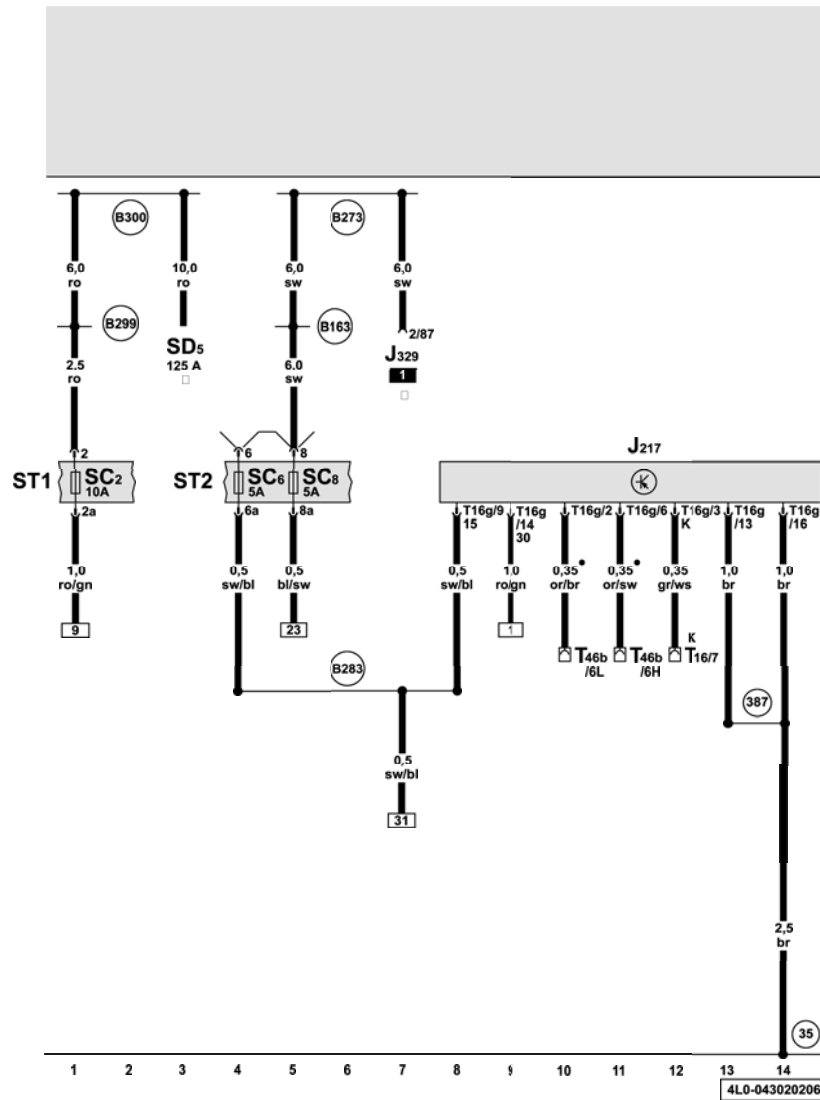

#### Automatic gearbox control unit, fuses

- J217 - Automatic gearbox control unit
- J329 - Terminal 15 voltage supply relay
- SC2 - Fuse 2 on fuse holder C
- SC6 - Fuse 6 on fuse holder C
- SC8 - Fuse 8 on fuse holder C
- SD5 - Fuse 5 on fuse holder D
- T16 - 16-pin connector, diagnosis socket
- T16g - 16-pin connector, black, on automatic gearbox control unit
- T46b - 46-pin connector, black, CAN separating connector right
- 35 - Earth point, under front passenger seat
- 387 - Earth connection 22, in main wiring harness
- B163 - Positive connection 1 (15), in interior wiring harness
- B273 - Positive connection (15), in main wiring harness
- B283 - Positive connection 7 (15a), in main wiring harness
- B299 - Positive connection 3 (30), in main wiring harness
- B300 - Positive connection 4 (30), in main wiring harness
- - CAN bus (data wire)
- \* - Relay and fuse carrier under driver seat


ws = white  
 sw = black  
 ro = red  
 br = brown  
 gn = green  
 bl = blue  
 gr = grey  
 li = purple  
 ge = yellow  
 or = orange  
 rs = pink

4L0-043020206

# Audi Q7


## Current Flow Diagram

### No. 43 / 3

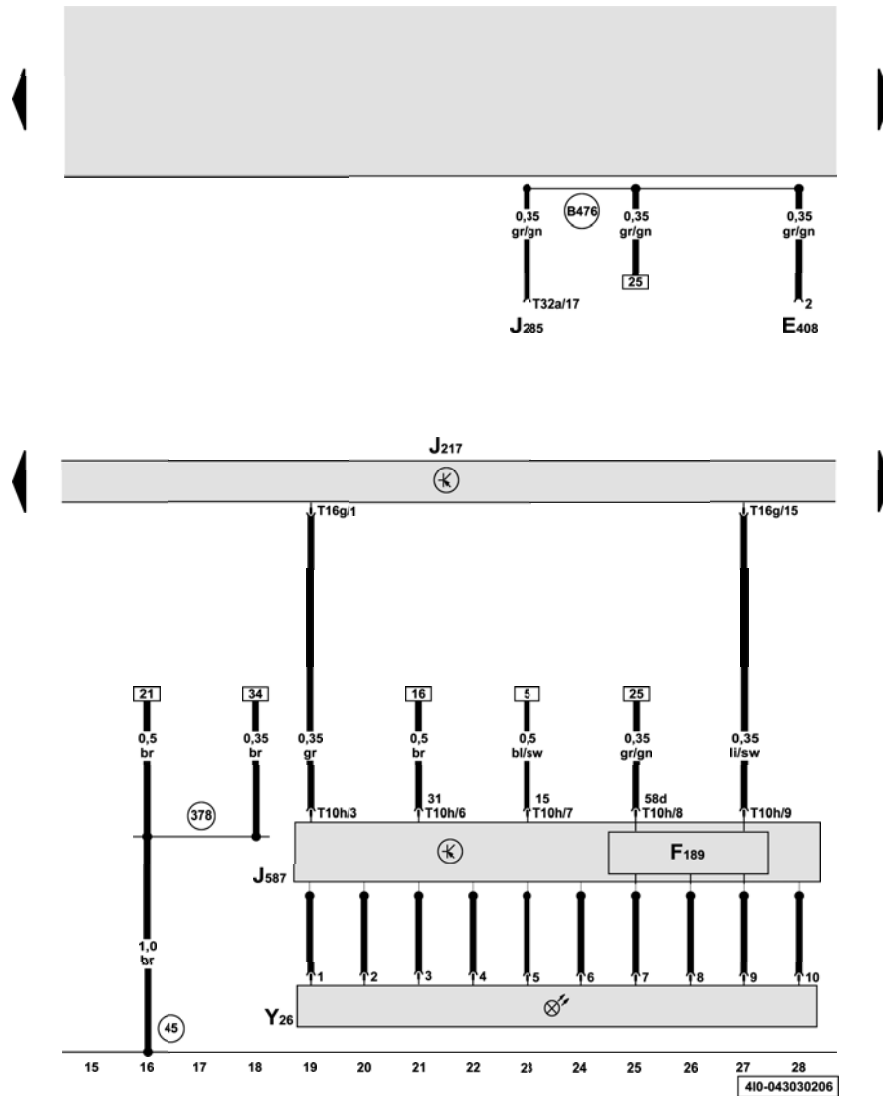

#### Automatic gearbox control unit, selector lever sensors control unit, Tiptronic switch, selector lever position display

- E408 - Entry and start authorisation button
- F189 - Tiptronic switch
- J217 - Automatic gearbox control unit
- J285 - Control unit in dash panel insert
- J587 - Selector lever sensors control unit
- T10h - 10-pin connector, black, on selector lever sensors control unit
- T16g - 16-pin connector, black, on automatic gearbox control unit
- T32a - 32-pin connector, grey, on control unit in dash panel insert
- Y26 - Selector lever position display
- 45 - Earth point, centre behind dash panel
- 378 - Earth connection 13, in main wiring harness
- B476 - Connection 12, in main wiring harness

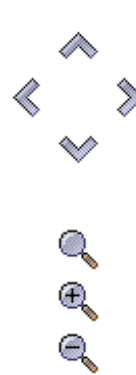

ws = white  
 sw = black  
 ro = red  
 br = brown  
 gn = green  
 bl = blue  
 gr = grey  
 li = purple  
 ge = yellow  
 or = orange  
 rs = pink

# Audi Q7


## Current Flow Diagram

### No. 43 / 4



#### Automatic gearbox control unit, gear selector position P switch, selector lever lock solenoid

- E415 - Entry and start authorisation switch
- F305 - Gear selector position P switch
- J217 - Automatic gearbox control unit
- J518 - Entry and start authorisation control unit
- J623 - Engine control unit
- N110 - Selector lever lock solenoid
- T4c - 4-pin connector, black, in centre console on selector lever console
- T6a - 6-pin connector, on entry and start authorisation switch
- T10c - 10-pin connector, pink, coupling station on electronics box, plenum chamber
- T16g - 16-pin connector, black, on automatic gearbox control unit
- T20e - 20-pin connector, black, on entry and start authorisation control unit
- B482 - Connection 18, in main wiring harness
- \* - see engine Current Flow Diagram

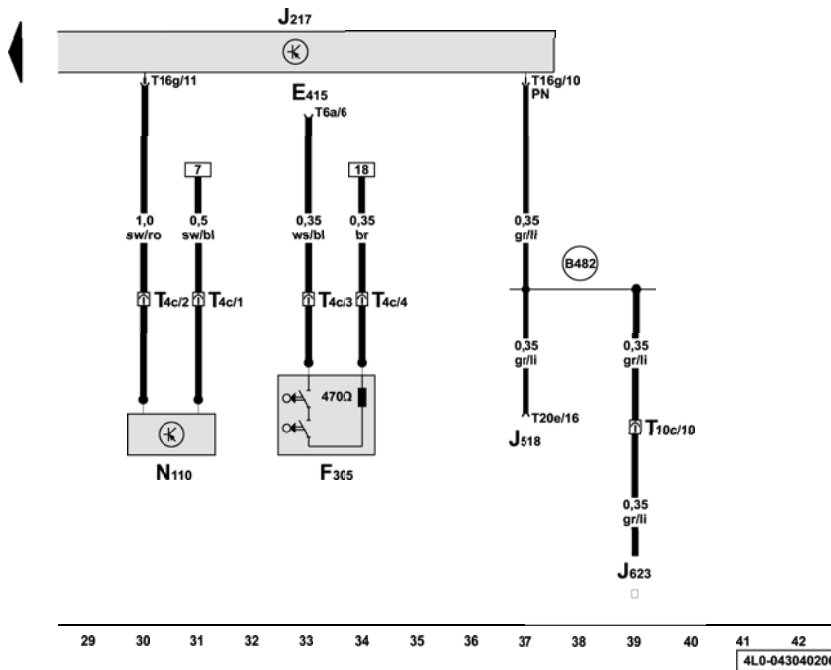

ws = white  
 sw = black  
 ro = red  
 br = brown  
 gn = green  
 bl = blue  
 gr = grey  
 li = purple  
 ge = yellow  
 or = orange  
 rs = pink